Klaus pötter



DA08-NA, DA10-NA, DA12-NA

Programming instruction for digital panelmeters with analogue inputs (Version 08/2002)

All Keys are on top of the caseKey T1:carries out the adjustment of the selected digitKey T2:selects the programming digit (is shown by the luminous decimal point). The final value of display is assigned to the MP 2 + 4 by using of key after the minimal and maximal input signal.Key T3:changes from normal-mode into programming-mode.		
MP	Display	Function / Description
1		Adjustment of the minimal value of display The minimal value of display must be positive (>0). If you need a negative one, please adjust the display to the value « 0 » and connect under MP 2 the belong input signal.
2	P – L	Take-over of the minimal input signal to be applied The minimal input signal must be connected on the measure input. Press the key T2 and the minimal value of display adjusted under MP 1 will be assigned to the minimal input signal. The display indicates « $P - L$ ».
3		Adjustment of the maximal value of display If you need a decimal point, you have to place it on the right position before leaving this MP
4	P – H	Take-over of the maximal input signal to be applied The maximal input signal must be connected on the measure input. Press the key T2 and the maximal value of display adjusted under MP 3 will be assigned to the maximal input signal. The display indicates « $P - H$ ».
5	01 _L	Adjustment of the average value Possibilities: 1 - 99 measurements. The adjusted value will be shown on the display. Line break indicator Possibilities: _ = no, L = yes (only by measuring 4-20 mA). If value falling below 25% of measuring value (< 3 mA) the display indicates « - - ».

After operating of T3 the display changes back into normal-mode

For a period of about 3 seconds the message « EE » appears on the display. The adjusted values are stored into the EEprom during this time.